



Optional ports are not use by all JTAG devices

Vpp +12V "Output power "need switch on under settings tab

JTAG cable 20190703

2019. 07. 03. 13:20

Sheet: 1/1